



Originale		Sostituto		Originale		Sostituto	
	Power		Power		Right		Right
	Display		Display / Media		Down		Down
	Setup		Setup / OPT /		1		1
	Mute		Mute / Dimmer		2		2
	Menu		Menu / Home		3		3
	Music		Red / Netflix / Search		4		4
	Copy		Info / Angle		5		5
	Zoom		Zoom / Size		6		6
	Tv System		TV/Radio /		7		7
	Browser		D.Menu / Top		8		8
	Vol-		Vol-		9		9
	Vol+		Vol+		Time Shift		Sound / Title
	Guide		Guide / EPG / -/-		0		0
	Return		Back / Return		Goto		Text / Goto
	Up		Up		Rec		Rec / Rec Mode
	Left		Left		Play		Play / Slow
	OK		OK		Stop		Stop / Hold





Originale	Sostituto
Timer	Sleep / Timer
Pause/Step	Pause / Step / Freeze
l>/Slow	Fav / Marker / PC
l<</Prev	l<< / Preset-
ReclList	Smart / List
←/INS Replay	CH- / Page-
→/CM Skip	CH+ / Page+
>>I/Next	>>I / Preset+
A-B	Yellow / YouTube / Repeat
Subtitle	Subtitle / EQ
Repeat	Green / APP / Repeat
<</FR	<< / Tune-
F1	Blue / Prime Video / Random
Source	AV / Input / RDS
Audio	Audio / Lang I/II
>>/FF	>> / Tune+

Originale	Sostituto

