





































Originale	Sostituto
 Power	 Power
 Game	 Smart / List
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 Display	 Display / Media
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Channel Return	 Back / Return
 0	 0
 +100	 Guide / EPG / -/--
 Vol-	 Vol-

Originale	Sostituto
 Vol-	 Left
 CH+	 CH+ / Page+
 CH+	 Up
 Vol+	 Vol+
 Vol+	 Right
 CH-	 CH- / Page-
 CH-	 Down
 Mute	 Mute / Dimmer
 Menu	 Menu / Home

