

 

 



 

 



 

 

 

 

 

 

 

 









Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 YPbPr	 Shift + 3
 MTS	 Audio / Lang I/II
 VGA	 Shift + 2
 TV	 Shift + 1
 AV	 Shift + AV / Input / RDS
 HDMI	 Shift + 0
 EPG	 Guide / EPG / -/--
 Aspect	 Setup / OPT /
 Aspect	 Shift + Picture / Format
 Menu	 Menu / Home
 Up	 Up

Originale	Sostituto
 Input	 AV / Input / RDS
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 TV Display	 Display / Media
 Vol+	 Vol+
 S.M	 Sound / Title
 CH+	 CH+ / Page+
 Vol-	 Vol-
 P.M	 Picture / Format
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4





Originale		Sostituto	
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
.	.	PC FAV MARKER	Fav / Marker / PC
0	0	HDMI - BAT 0	0
RECALL	Recall	RETURN BACK	Back / Return

Originale		Sostituto	





Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 YPbPr	 Shift + Menu /
 CC	 Subtitle / EQ
 MTS	 D.Menu / Top
 VGA	 Sleep / Timer
 DTV strength	 Setup / OPT /
 TV	 Shift + 1
 AV	 AV / Input / RDS
 HDMI	 Shift + 0
 CHList	 Smart / List
 EPG	 Guide / EPG / -/--
 FAV	 Fav / Marker / PC

Originale	Sostituto
 Aspect	 Zoom / Size
 Menu	 Menu / Home
 Up	 Up
 Source	 Shift + AV / Input / RDS
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Tv Display	 TV/Radio /
 Vol+	 Vol+
 S.M	 Sound / Title
 CH+	 CH+ / Page+
 Vol-	 Vol-
 P.M	 Picture / Format
 CH-	 CH- / Page-
 1	 1





Originale		Sostituto	
2	2	DVD 2	2
3	3	CD - STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
.	.	SHIFT + GUIDE EPG	Shift + Guide / EPG / -/--
0	0	HDMI - BAT 0	0
RECALL	Recall	RETURN BACK	Back / Return

Originale		Sostituto	

