





Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 Tuner/Band	 Shift + 6
 DVD	 Shift + 2
 Portable	 Shift + 3
 USB	 Shift + 8
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 EQ	 Shift + Subtitle / EQ

Originale	Sostituto
 XDSS plus	 Smart / List
 Sound Mode	 Sound / Title
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Return	 Back / Return
 Setup	 Setup / OPT /
 Up/Preset+	 Up
 Display	 Display / Media
 Left/Tun.-	 Left
 Select/Enter	 OK
 Right/Tun.+	 Right
 Menu	 Menu / Home
 Down/Preset-	 Down
 Title	 Shift + Sound / Title
 Prog. Memo	 TV/Radio /
 <</Scan-	 << / Tune-
 >>/Scan+	 >> / Tune+





Originale	Sostituto
 Volume+	 Vol+
 Repeat	 Green / APP / Repeat
 </Slow-	 CH- / Page-
  >/Slow+	 CH+ / Page+
 Repeat A/B	 Yellow / YouTube / Repeat
 I<</Skip-	 I<< / Preset-
 >>I/Skip+	 >>I / Preset+
 Volume-	 Vol-
 Stop/Mo/ST	 Stop / Hold
 Pause/Step	 Pause / Step / Freeze
 Play	 Play / Slow
 Clear	 Exit / Cancel / Clear
 Zoom	 Zoom / Size
 Marker	 Fav / Marker / PC
 Search	 Red / Netflix / Search
 Sleep	 Sleep / Timer
 RDS	 AV / Input / RDS

Originale	Sostituto
 PTY	 Picture / Format

