







 



 

 

 


 
 



 

 



 

















 

 



 

 



 
 










Originale		Sostituto		Originale		Sostituto	
	Power		Power		Green		Green / APP / Repeat
	DTV/VCR		Smart / List		Left		Left
	1		1		Vol-		Vol-
	2		2		OK		OK
	3		3		Right		Right
	4		4		Vol+		Vol+
	5		5		Yellow		Yellow / YouTube / Repeat
	6		6		Down		Down
	7		7		CH-		CH- / Page-
	8		8		Blue		Blue / Prime Video / Random
	9		9		Mute		Mute / Dimmer
	Menu		Menu / Home		Pause		Pause / Step / Freeze
	0		0		Favorite		Fav / Marker / PC
	Exit		Exit / Cancel / Clear		Recall		Back / Return
	Red		Red / Netflix / Search		Lang		Shift + Audio / Lang I/II
	Up		Up		Info		Info / Angle
	CH+		CH+ / Page+		EPG		Guide / EPG / -/-





Originale	Sostituto
TV/RADIO	PROGRAM TV/RADIO
Audio	LANG I/II AUDIO
TTX	GOTO TEXT
Subtitle	EQ SUBTITLE

Originale	Sostituto

