



























 













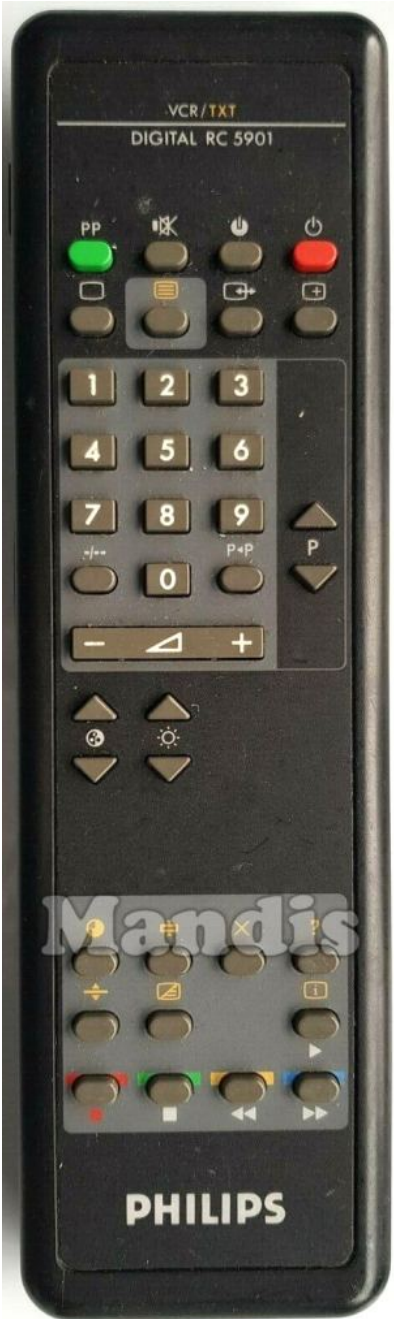 






































































Originale	Sostituto
 PP	 Back / Return
 Mute	 Mute / Dimmer
 (I)	 OK
 Power	 Power
 []	 Display / Media
 [=]	 Text / Goto
 [↔]	 AV / Input / RDS
 [+]	 Smart / List
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Originale	Sostituto
 P+	 CH+ / Page+
 -/--	 Guide / EPG / -/--
 0	 0
 P<P	 Fav / Marker / PC
 P-	 CH- / Page-
 Vol-	 Vol-
 Vol+	 Vol+
 Colour+	 Right
 Brighness-	 Down
 Colour-	 Left
 Brighness+	 Up
 ●	 Setup / OPT /
 □	 Stop / Hold
 X	 Exit / Cancel / Clear
 [?]	 D.Menu / Top
 ◆	 Zoom / Size
 [/ =]	 Sleep / Timer





Originale		Sostituto		Originale		Sostituto	
	PP		Back / Return		-/--		Guide / EPG / -/--
	Mute		Mute / Dimmer		0		0
	(I)		OK		P<P		Fav / Marker / PC
	Power		Power		P-		CH- / Page-
	[]		Display / Media		Vol-		Vol-
	[↔]		AV / Input / RDS		Vol+		Vol+
	[+]		Smart / List		●		Setup / OPT /
	1		1		□		TV/Radio /
	2		2		X		Exit / Cancel / Clear
	3		3		?		D.Menu / Top
	4		4		Size		Zoom / Size
	5		5		[=]		Text / Goto
	6		6		[/=]		Sleep / Timer
	7		7		Play		Play / Slow
	8		8		Rec		Rec / Rec Mode
	9		9		Stop		Stop / Hold
	P+		CH+ / Page+		<<		<< / Tune-



