






























Originale	Sostituto
 Power	 Power
 Info	 Info / Angle
 Input	 AV / Input / RDS
 [++]	 Setup / OPT /
 [1]	 Picture / Format
 [2]	 Zoom / Size
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Guide	 Guide / EPG / -/--
 0	 0

Originale	Sostituto
 CH.List	 Smart / List
 [=]	 D.Menu / Top
 Up	 Up
 Colors	 Fav / Marker / PC
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Vol+	 Vol+
 Home	 Menu / Home
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 CH-	 CH- / Page-





Originale		Sostituto		Originale		Sostituto	
	TXT		Text / Goto				
	Voice		Audio / Lang I/II				
	Sub.		Subtitle / EQ				
	Netflix		Red / Netflix / Search				
	YouTube		Yellow / YouTube / Repeat				
	Prime Video		Blue / Prime Video / Random				
	Rakuten Tv		TV/Radio /				

