



Originale	Sostituto	Originale	Sostituto
 Marche	 Power	 Play/Lect	 Play / Slow
 1	 1	 <</RET	 << / Tune-
 2	 2	 >>/AV	 >> / Tune+
 3	 3	 Pause	 Pause / Step / Freeze
 4	 4	 Stop	 Stop / Hold
 5	 5	 Up	 Up
 6	 6	 Left	 Left
 7	 7	 Right	 Right
 8	 8	 Down	 Down
 9	 9	 EFF./Clear	 Exit / Cancel / Clear
 TV / Video	 TV/Radio /	 OK/Horloge	 OK
 TV / Video	 Shift + 4	 i	 Info / Angle
 TV / Video	 Shift + 1	 LP	 Setup / OPT /
 0	 0	 AV	 AV / Input / RDS
 Zappub	 Smart / List	 Verrouillage	 Display / Media
 ENR/DEP	 Rec / Rec Mode	 Smart Stop	 Shift + Stop /
 Eject	 Eject / Surround	 Smart Repeat	 Green / APP / Repeat

Originale	Sostituto	Originale	Sostituto
 Play/Lect	 Play / Slow	 Play/Lect	 Play / Slow
 <</RET	 << / Tune-	 <</RET	 << / Tune-
 >>/AV	 >> / Tune+	 >>/AV	 >> / Tune+
 Pause	 Pause / Step / Freeze	 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold	 Stop	 Stop / Hold
 Up	 Up	 Up	 Up
 Left	 Left	 Left	 Left
 Right	 Right	 Right	 Right
 Down	 Down	 Down	 Down
 EFF./Clear	 Exit / Cancel / Clear	 EFF./Clear	 Exit / Cancel / Clear
 OK/Horloge	 OK	 OK/Horloge	 OK
 i	 Info / Angle	 i	 Info / Angle
 LP	 Setup / OPT /	 LP	 Setup / OPT /
 AV	 AV / Input / RDS	 AV	 AV / Input / RDS
 Verrouillage	 Display / Media	 Verrouillage	 Display / Media
 Smart Stop	 Shift + Stop /	 Smart Stop	 Shift + Stop /
 Smart Repeat	 Green / APP / Repeat	 Smart Repeat	 Green / APP / Repeat

