








 


 

 
 


 
 
 


 



 









 

 


 

 

 


 



 


 
 






 




Originale		Sostituto		Originale		Sostituto	
	Source		AV		0		0
	Power		Power		Recall		Pre Ch
	TV		TV/R		Vol+		Vol +
	-[/]-		Sleep		[i+]		Info
	[<>]		Format		P+		Ch +
	O)/II		Dual		Vol-		Vol -
	Subtitle		Subt		Mute		Mute
	1		1		P-		Ch -
	2		2		Quick		Smart
	3		3		[.]		Shift + Options
	4		4		[>]		Options
	5		5		Text		Text
	6		6		List		List
	7		7		Menu		Menu
	8		8		↑↑		Shift + Up
	9		9		Guide		Guide
	AD		Shift + Subt		Up		Up





Originale		Sostituto		Originale		Sostituto	
	<<	 + 	Shift + Left		Green		Green
	Left		Left		Yellow		Yellow
	OK		Ok		Blue		Blue
	Right		Right				
	>>	 + 	Shift + Right				
	Back		Back				
	Down		Down				
	Exit		Exit				
	↓↓	 + 	Shift + Down				
	<</[≡+]		<<				
	Play		Play				
	>>/[≡◇]		>>				
	I<</[≡?]		I<<				
	Stop		Stop				
	Pause/Step		Pause				
	>>I/[O]/[≡x]		>>I				
	Red		Red				

