


























 









Originale	Sostituto	Originale	Sostituto
On/Off	 Power	Chan.Up	 CH+ / Page+
Mute	 Mute / Dimmer	Volume-	 Vol-
Menu audio	 Audio / Lang I/II	Chan.Down	 CH- / Page-
Return TV	 TV/Radio /	1	 1
Update	 D.Menu / Top	2	 2
Text	 Text / Goto	3	 3
TV/AV	 AV / Input / RDS	4	 4
Menu	 Menu / Home	5	 5
Menu Up	 Up	6	 6
Info	 Info / Angle	7	 7
Menu Left	 Left	8	 8
OK Enter	 OK	9	 9
Menu Right	 Right	0/10	 0
Menu Off	 Exit / Cancel / Clear	2.Fav P/C 2.	 Fav / Marker / PC
Menu Down	 Down	Red	 Red / Netflix / Search
Back	 Back / Return	Green	 Green / APP / Repeat
Volume+	 Vol+	Yellow	 Yellow / YouTube / Repeat



Originale	Sostituto	Originale	Sostituto
Blue	 Blue / Prime Video / Random		

