 









 
 








 





 











Originale	Sostituto
 Power	 Power
 Open / Close	 Eject / Surround
 Mode	 Setup / OPT /
 Menu	 Menu / Home
 Bluetooth	 Shift + 9
 Dimmer	 Shift + Dimmer Mute / Dimmer
 Clock	 Shift + Sleep / Timer
 Alarm	 Smart / List
 Sleep	 Sleep / Timer
 Snooze	 Display / Media
 Info	 Info / Angle
 Intro	 Text / Goto
 Folder Down	 CH- / Page-
 Folder Up	 CH+ / Page+
 Stop	 Stop / Hold
 Play / Pause	 Play / Slow
 <<	 << / Tune-

Originale	Sostituto
 >>	 >> / Tune+
 Random	 Blue / Prime Video / Random
 Up	 Up
 Repeat	 Green / APP / Repeat
 Left	 Left
 OK	 OK
 Right	 Right
 A-B	 Yellow / YouTube / Repeat
 Down	 Down
 Mute	 Mute / Dimmer
 POP	 Shift + 1
 Vol+	 Vol+
 Classic	 Shift + 3
 Rock	 Shift + 2
 Vol-	 Vol-
 Flat	 Shift + 4
 1	 1





Originale		Sostituto		Originale		Sostituto	
2	2	DVD 2	2				
3	3	CD - STB 3	3				
4	4	VIDEO 4	4				
5	5	TAPE 5	5				
6	6	TUNER 6	6				
7	7	AUX - HDD 7	7				
8	8	USB 8	8				
9	9	BLUETOOTH 9	9				
SCAN	Scan	TOP MENU D.MENU	D.Menu / Top				
0	0	HDMI - BAT 0	0				
PROG	Prog	PROGRAM TV / RADIO	TV/Radio /				

