





 
































Originale	Sostituto
	 Power
	 Mute / Dimmer
	 TV/Radio /
	 Sleep / Timer
	 Zoom / Size
	 D.Menu / Top
	 Back / Return
	 Setup / OPT /
	 CH+ / Page+
	 Display / Media
	 Vol+
	 CH- / Page-
	 Info / Angle
	 Vol-
	 Fav / Marker / PC
	 Smart / List
	 Eject / Surround

Originale	Sostituto
	 Guide / EPG / -/-
	 Up
	 Menu / Home
	 Left
	 OK
	 Right
	 Exit / Cancel / Clear
	 Down
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 1
	 2
	 3
	 4
	 5





Originale	Sostituto
6	6
7	7
8	8
9	9
Music	Sound / Title
0	0
Photo	Picture / Format
Rec	Rec / Rec Mode
<<	<< / Tune-
Play	Play / Slow
>>	>> / Tune+
Recall	AV / Input / RDS
>	>> / Preset+
Stop/→	Stop / Hold
Pause	Pause / Step / Freeze
[]]]]	Shift + Zoom /
[...]	Subtitle / EQ

Originale	Sostituto
TXT	Text / Goto
Audio	Audio / Lang I/II

