






 


















 





 





Originale	Sostituto
	 Info / Angle
	 Power
	 Text / Goto
	 Audio / Lang I/II
	 Shift + 2
	 Eject / Surround
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Display / Media
	 0

Originale	Sostituto
	 Shift + Menu /
	 Smart / List
	 Back / Return
	 Menu / Home
	 Zoom / Size
	 Setup / OPT /
	 Up
	 CH+ / Page+
	 Left
	 OK
	 Right
	 Down
	 CH- / Page-
	 Vol+
	 Mute / Dimmer
	 TV/Radio /
	 Vol-





Originale	Sostituto
	Shift + Blue / Prime
	Guide / EPG / -/--
	Rec / Rec Mode
	<< / Tune-
	Play / Slow
	Pause / Step / Freeze
	>> / Tune+
	Shift + Play /
	I << / Preset-
	Stop / Hold
	>> I / Preset+
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random

Originale	Sostituto

