



Originale	Sostituto
 Power	 Power
 Freeze	 Pause
 Hide	 Media
 Aspect Ratio	 Format
 Resync	 Smart
 Source	 AV
 Zoom	 Eject
 Mute	 Mute
 e	 3D
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Menu	 Menu
 1 / < / <<<	 1
 1 / < / <<<	 <<<
 1 / < / <<<	 I<<<

Originale	Sostituto
 2 / Enter / Play/Pause	 2
 2 / Enter / Play/Pause	 Play
 2 / Enter / Play/Pause	 Ok
 3 / Back / Stop	 Back
 3 / Back / Stop	 3
 3 / Back / Stop	 Stop
 4 / VGA	 Red
 4 / VGA	 4
 5 / Component	 Green
 5 / Component	 5
 6 / Video	 Yellow
 6 / Video	 6
 7 / SD / USB A	 Shift + Red
 7 / SD / USB A	 7
 8 / HDMI/DVI	 Shift + Green
 8 / HDMI/DVI	 8
 9 / LAN/WIFI	 Shift + Yellow





	Originale	Sostituto		Originale	Sostituto
	9 / LAN/WIFI	9			
	0 / USB-B	+ Shift + Blue			
	0 / USB-B	0			
	PgUp / >I / >>	>>I			
	PgUp / >I / >>	>>			
	PgUp / >I / >>	Ch +			
	PgDn / S.Video	Blue			
	PgDn / S.Video	Ch -			

