

 



 















 



 

 

 





 
 


















 




 

 





 

 

 




Originale		Sostituto		Originale		Sostituto	
	Power		Power		P < P		Display / Media
	Up		Up		0		0
	Left		Left		Aspect		Picture / Format
	Right		Right		Swap		Back / Return
	Down		Down		P - / CH -		CH- / Page-
	M Menu		Menu / Home		P + / CH +		CH+ / Page+
	[i] Info		Info / Angle		Vol -		Vol-
	OK		OK		Vol +		Vol+
	1		1		Mute		Mute / Dimmer
	2		2		I - II		Audio / Lang I/II
	3		3		[TV]		Smart / List
	4		4		Source		AV / Input / RDS
	5		5		Red / PIP		Red / Netflix / Search
	6		6		Green		Green / APP / Repeat
	7		7		Yellow		Yellow / YouTube / Repeat
	8		8		Blue		Blue / Prime Video / Random
	9		9		Text		Text / Goto





Originale		Sostituto		Originale		Sostituto	
	Timer		Sleep / Timer				
	Hold		Stop / Hold				
	Cancel	 	Exit / Cancel / Clear				
	Mix	 +  	Shift + Text /				
	Size	 	Zoom / Size				
	Help	 	Setup / OPT /				
	Index	 	D.Menu / Top				

