 














































































Originale		Sostituto		Originale		Sostituto	
	Standby		Power		Zoom		Zoom / Size
	Open/Close		Eject / Surround		0/10		0
	Goto		Shift + Text /		10+		Guide / EPG / -/-
	Step		Shift + Pause / Step /		A-B		Yellow / YouTube / Repeat
	Prog		TV/Radio /		OSD		Display / Media
	Mute		Mute / Dimmer		Repeat		Green / APP / Repeat
	1		1		Menu		Menu / Home
	2		2		Volume+		Vol+
	3		3		Angle		Info / Angle
	Audio		Audio / Lang I/II		Video		Shift + 4
	4		4		Slow		Shift + Play /
	5		5		Volume-		Vol-
	6		6		Setup		Setup / OPT /
	Subtitle		Subtitle / EQ		Up		Up
	7		7		L/R		Text / Goto
	8		8		Left		Left
	9		9		Enter		OK





Originale		Sostituto		Originale		Sostituto	
	Right		Right				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	Stop		Stop / Hold				
	Down		Down				
	N/P		Picture / Format				
	Title		Sound / Title				
	DVD/USB		Shift + 2				
	I<<		I<< / Preset-				
	>>I		>>I / Preset+				
	<<		<< / Tune-				
	>>		>> / Tune+				

