



 



 

 

 


 
 
 



 
 
 




 


 






Originale	Sostituto
 Standby	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 P.P	 Back
 FAV	 Pre Ch
 DTV EPG	 Guide
 Input	 AV
 Mute	 Mute
 Audio	 Dual

Originale	Sostituto
 Red/Sound	 Red
 Green/Picture	 Green
 Yellow/VGA	 Yellow
 Blue/TV	 Blue
 [=+]/Hold	 Options
 [=?]/Reveal	 TV/R
 [=◇]/Size	 Format
 [/ =]	 Smart
 [=i]/Index	 Shift + Info
 [O]/Subpage	 Media
 [=]/Text	 Text
 Vol+	 Vol +
 Vol-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 PIP	 3D
 Wide	 Eject





Originale		Sostituto		Originale		Sostituto	
	Info		Info				
	Sleep		Sleep				
	Menu		Menu				
	Exit		Exit				
	Menu DTV		D. Menu				
	Subtitle/Subtitle DTV		Subt				
	CH View/CHList		List				
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				
	OK		Ok				

