









 



















 







Originale	Sostituto	Originale	Sostituto
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Text		Text / Goto
	0		0
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Audio		Audio / Lang I/II

Originale	Sostituto	Originale	Sostituto
	Sleep		Sleep / Timer
	Source		AV / Input / RDS
	CH+		CH+ / Page+
	Vol+		Vol+
	Display		Display / Media
	CH-		CH- / Page-
	Vol-		Vol-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Menu		Menu / Home
	OK		OK





Originale	Sostituto
Exit	Exit / Cancel / Clear
Subtitle	Subtitle / EQ
Index	Info / Angle
Size	Zoom / Size
Reveal	D.Menu / Top
Mix	Setup / OPT /
Play	Play / Slow
Pause/Hold	Pause / Step / Freeze
I<</Cancel	I<< / Preset-
>>/Subpage	>>I / Preset+
EPG	Guide / EPG / -/--
FAV	Fav / Marker / PC
Stop	Stop / Hold
<</FAV-	<< / Tune-
>>/FAV+	>> / Tune+
Media	+ Shift + Display / Media
Rec	Rec / Rec Mode

Originale	Sostituto
Timeshift	Smart / List
Tv/Radio	TV/Radio /

