



| Originale | Sostituto |
|--|--|
|  Standby |  Power |
|  USB / Card |  Media |
|  Open / Close |  Eject |
|  Audio |  Dual |
|  Subtitle |  Subt |
|  Search |  TV/R |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  Clear |  Exit |

| Originale | Sostituto |
|--|---|
|  Menu |  Menu |
|  Setup |  Options |
|  Display |  Info |
|  Title |  Smart |
|  Up |  Up |
|  Left |  Left |
|  Enter |  Ok |
|  Right |  Right |
|  Down |  Down |
|  << REV |  << |
|  >> FWD |  >> |
|  I<< PREV |  I<< |
|  >>I NEXT |  >>I |
|  II> Step |  Shift + Pause |
|  Stop |  Stop |
|  Play / Pause |  Play |
|  Play / Pause |  Pause |





| Originale | | Sostituto | | Originale | | Sostituto | |
|---|----------|---|---------------|-----------|--|-----------|--|
|  | Vol + |  | Vol + | | | | |
|  | Vol - |  | Vol - | | | | |
|  | Repeat |  | Text | | | | |
|  | A-B |  | D. Menu | | | | |
|  | Angle |  | Format | | | | |
|  | Mute |  | Mute | | | | |
|  | L/R |  | Ch + | | | | |
|  | N/P |  | Ch - | | | | |
|  | PBC |  | 3D | | | | |
|  | Slow |  | Shift + Play | | | | |
|  | V-Mode |  | AV | | | | |
|  | Return |  | Back | | | | |
|  | HD / Res |  | Red | | | | |
|  | Program |  | Sleep | | | | |
|  | Zoom |  | Shift + Eject | | | | |
| | | | | | | | |
| | | | | | | | |

