








 

 

 

 



 





Originale		Sostituto		Originale		Sostituto	
	Power		Power				
AUX	AUX		7				
1	1		1				
2	2		2				
3	3		3				
4	4		4				
5	5		5				
6	6		6				
	Vol+		Vol+				
	Vol-		Vol-				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	I<<		I<< / Preset-				
	>>I		>>I / Preset+				

