

























Originale		Sostituto		Originale	Sostituto
	Power		Power		
	Bluetooth / AUX		7		
	Bluetooth / AUX		9		
<b>1</b>	1		1		
<b>2</b>	2		2		
<b>3</b>	3		3		
<b>4</b>	4		4		
<b>5</b>	5		5		
<b>6</b>	6		6		
	Vol+		Vol+		
	Play / Pause		Play / Slow		
	Play / Pause		Pause / Step / Freeze		
	Vol-		Vol-		
	I<<		I<< / Preset-		
	>>I		>>I / Preset+		
	Dislike		CH- / Page-		
	Like		CH+ / Page+		

