



| Originale | Sostituto             |
|-----------|-----------------------|
| Tv/Radio  | TV/Radio /            |
| Power     | Power                 |
| Play      | Play / Slow           |
| Pause     | Pause / Step / Freeze |
| Stop      | Stop / Hold           |
| <<        | << / Tune-            |
| >>        | >> / Tune+            |
| Rec       | Rec / Rec Mode        |
| Media     | Display / Media       |
| Lang.     | Audio / Lang I/II     |
| SUB       | Subtitle / EQ         |
| Guide     | Guide / EPG / -/--    |
| Up        | Up                    |
| Menu      | Menu / Home           |
| Left      | Left                  |
| OK        | OK                    |
| Right     | Right                 |

| Originale    | Sostituto                   |
|--------------|-----------------------------|
| FAV.         | Fav / Marker / PC           |
| Down         | Down                        |
| X/Exit       | Exit / Cancel / Clear       |
| Vol+         | Vol+                        |
| Mute         | Mute / Dimmer               |
| P+           | CH+ / Page+                 |
| Vol-         | Vol-                        |
| i            | Info / Angle                |
| P-           | CH- / Page-                 |
| Red          | Red / Netflix / Search      |
| Green        | Green / APP / Repeat        |
| Yellow/Timer | Yellow / YouTube / Repeat   |
| Blue         | Blue / Prime Video / Random |
| 1            | 1                           |
| 2            | 2                           |
| 3            | 3                           |
| 4            | 4                           |





| Originale |         | Sostituto       |               |
|-----------|---------|-----------------|---------------|
| 5 jkl     | 5       | TAPE<br>5       | 5             |
| 6 mno     | 6       | TUNER<br>6      | 6             |
| 7 pqrs    | 7       | AUX - HDD<br>7  | 7             |
| 8 tuv     | 8       | USB<br>8        | 8             |
| 9 wxyz    | 9       | BLUETOOTH<br>9  | 9             |
| TTX       | TTX     | GOTO<br>TEXT    | Text / Goto   |
| 0 &euml;  | 0       | HDMI - BAT<br>0 | 0             |
| CH↔       | CH Back | RETURN<br>BACK  | Back / Return |
|           |         |                 |               |
|           |         |                 |               |
|           |         |                 |               |
|           |         |                 |               |
|           |         |                 |               |
|           |         |                 |               |
|           |         |                 |               |
|           |         |                 |               |
|           |         |                 |               |
|           |         |                 |               |

| Originale | Sostituto |
|-----------|-----------|
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |

