


 
 
 

 

 


 

 


 

 
 





Originale	Sostituto
 Power	 Power
 Mute	 Mute
 Eject / Nicam	 Eject
 Recall / Goto	 Pre Ch
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TV Menu	 Menu
 Source	 AV
 Up	 Up

Originale	Sostituto
 Right	 Right
 Down	 Down
 Left	 Left
 Enter	 Ok
 DVD/DVB Menu	 D. Menu
 Exit	 Exit
 Vol +	 Vol +
 Vol -	 Vol -
 Sound	 Shift + Dual
 PIC	 Shift + Format
 CH +	 Ch +
 CH -	 Ch -
 Sleep	 Sleep
 Aspect	 Format
 Rad / DVD	 Options
 Recall / TV	 Back
 Text	 Text





Originale	Sostituto
Play/Pause / Info	Info
Play/Pause / Info	Play
Play/Pause / Info	Pause
Stop / FAV	+ Shift + Pre Ch
Stop / FAV	Stop
EPG	Guide
Red / DVD/USB	Red
Green / Title	Green
Yellow / PBC	Yellow
Blue / Angle	Blue
<< / Reveal	<<
>> / Hold	>>
I<< / List	I<<
>>I / Index	>>I
Subpage	Media
Display	+ Shift + Info
Audio	Dual

Originale	Sostituto
Subtitle	Subt

