 







 


 



 
 


 
 


 
 
 
 
 
 


 
 

 
 


 
 

 



 
 

 





 
 












Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Left	 Left
 Mute	 Mute	 OK	 Ok
 1	 1	 CH+	 Ch +
 2	 2	 CH-	 Ch -
 3	 3	 Vol+	 Vol +
 4	 4	 Vol-	 Vol -
 5	 5	 Red	 Red
 6	 6	 Yellow	 Yellow
 7	 7	 Blue	 Blue
 8	 8	 Green	 Green
 9	 9	 EPG	 Guide
 0	 0	 Subtitle	 Subt
 Menu	 Menu	 TTX	 Text
 Exit	 Exit	 Audio	 Dual
 Up	 Up	 i	 Info
 Down	 Down	 FAV	 Pre Ch
 Right	 Right	 Tv/Radio	 TV/R

Originale	Sostituto	Originale	Sostituto
 MUTE	 MUTE	 TV	 DVD
 TV	 SAT	 AUX	 REC MODE
 DUAL	 SUBT	 PLAY MODE	 STOP
 SUBT	 OPT	 LEFT	 RIGHT
 FORMAT	 3D	 DISC NAV	 SOUND
 3D	 ECO	 AD	 SETTINGS
 AV	 E-MANUAL	 REPEAT	 PICTURE
 INFO	 D.MENU	 ZOOM	 TIMER
 OK	 MENU	 TOP MENU	 DISPLAY
 UP	 RETURN	EXIT	BACK
DOWN	HOME	SMART	CH+
LEFT	APP	MEDIA	CH-
RIGHT	VOL+	VOL-	CH-
TV/R	1	2	3
TV/R	4	5	6
TV/R	7	8	9
TV/R	0	FAV	PRE-CH
TV/R	GUIDE	A	B
TV/R	PRE-CH	C	D
TV/R	TV/R	Mandis SHOP	www.mandis.tv



