

 

 



 

 


 

 


 



 

 








Originale	Sostituto
 Power	 Power
 Audio	 Audio / Lang I / II
 Mute	 Mute / Dimmer
 Tv/R	 TV/Radio /
 Sub-T	 Subtitle / EQ
 EPG	 Guide / EPG / -/-
 Text	 Text / Goto
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Favor	 Fav / Marker / PC

Originale	Sostituto
 0	 0
 Last	 Back / Return
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Up	 Up
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Left	 Left
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 Info	 Info / Angle
 CH-	 CH- / Page-
 Down	 Down
 Mode	 Smart / List
 PVR	 Display / Media
 USB	 Shift + 8





Originale	Sostituto	Originale	Sostituto
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Red		Red / Netflix / Search
	I<<		I<< / Preset-
	Yellow		Yellow / YouTube / Repeat
	>>I		>>I / Preset+
	Stop		Stop / Hold
	Green		Green / APP / Repeat
	<<		<< / Tune-
	>>		>> / Tune+
	Blue		Blue / Prime Video / Random
	Rec		Rec / Rec Mode

Originale	Sostituto	Originale	Sostituto

