









 


 

 


 

 
 


 
 


 

 

 



 


 
 



 

 
 
 
 





 



 


 




 
 
 

 
 

 

 
 



 
 








Originale	Sostituto	Originale	Sostituto
 Power	 Power	 CH+	 Ch +
 Mute	 Mute	 CH-	 Ch -
 1	 1	 Up	 Up
 2	 2	 Down	 Down
 3	 3	 Right	 Right
 4	 4	 Left	 Left
 5	 5	 OK	 Ok
 6	 6	 Exit	 Exit
 7	 7	 Menu	 Menu
 8	 8	 Aspect	 Format
 9	 9	 Sleep	 Sleep
 0	 0	 Rec	 Rec
 PR.List	 List	 Red/DVD Setup	 Red
 Recall	 Pre Ch	 Green/Repeat	 Green
 Source	 AV	 Yellow/Languag	 Yellow
 Vol+	 Vol +	 Blue/DVD Menu	 Blue
 Vol-	 Vol -	 Title/PC Auto	 Media





Originale		Sostituto		Originale		Sostituto	
	Tv/Radio		TV/R		PIC.Mode		Shift + Format
	I-II/Audio		Dual		S.Mode		Shift + Dual
	Subtitle		Subt		Zoom		Shift + Eject
	Prog/Index		Options				
	Step/Freeze		Back				
	Text		Text				
	Info/Display		Info				
	Play/Size		Play				
	Pause/Subpage		Pause				
	Stop/Hold		Stop				
	I<<		I<<				
	>>I		>>I				
	<<		<<				
	>>		>>				
	Rec List		Guide				
	Open/Close		Eject				
	A-B/Reveal		D. Menu				

