






















 





 



 

 





















































Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Up	 Up
 16:9 / Wide	 Picture / Format	 Left	 Left
 Mute	 Mute / Dimmer	 OK	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 Vol +	 Vol+
 4	 4	 Menu	 Menu / Home
 5	 5	 CH +	 CH+ / Page+
 6	 6	 Vol -	 Vol-
 7	 7	 Source	 AV / Input / RDS
 8	 8	 CH -	 CH- / Page-
 9	 9	 Info	 Info / Angle
 0	 0	 Sleep	 Sleep / Timer
 F1	 Exit / Cancel / Clear	 Recall	 Back / Return
 [:≡]	 D.Menu / Top	 L / R	 Eject / Surround
 Smart S	 Sound / Title	 Index / Play	 Play / Slow
 Smart P	 Shift + Picture / Format	 Index / Play	 Display / Media

Originale	Sostituto	Originale	Sostituto
 Up	 Up	 Left	 Left
 Left	 Left	 OK	 OK
 Right	 Right	 Down	 Down
 Down	 Down	 Vol +	 Vol+
 Vol +	 Vol+	 Menu	 Menu / Home
 Menu	 Menu / Home	 CH +	 CH+ / Page+
 CH +	 CH+ / Page+	 Vol -	 Vol-
 Vol -	 Vol-	 Source	 AV / Input / RDS
 Source	 AV / Input / RDS	 CH -	 CH- / Page-
 CH -	 CH- / Page-	 Info	 Info / Angle
 Info	 Info / Angle	 Sleep	 Sleep / Timer
 Sleep	 Sleep / Timer	 Recall	 Back / Return
 Recall	 Back / Return	 L / R	 Eject / Surround
 L / R	 Eject / Surround	 Index / Play	 Play / Slow
 Index / Play	 Play / Slow	 Index / Play	 Display / Media
 Index / Play	 Display / Media		





Originale		Sostituto		Originale		Sostituto	
	Zoom / Pause		Zoom / Size		Green / Subtitle		Green / APP / Repeat
	Zoom / Pause		Pause / Step / Freeze		Yellow / Fav		Fav / Marker / PC
	Reveal / Stop		Stop / Hold		Yellow / Fav		Yellow / YouTube / Repeat
	Reveal / Stop		Setup / OPT /		Blue / EPG		Guide / EPG / -/-
	TTX		Text / Goto		Blue / EPG		Blue / Prime Video / Random
	Hold / I<<		I<< / Preset-				
	Hold / I<<		Shift + Stop /				
	List / >>I		>>I / Preset+				
	List / >>I		Smart / List				
	Language / <<		<< / Tune-				
	Language / <<		Audio / Lang I/II				
	Save / >>		>> / Tune+				
	Save / >>		Shift + Rec / Rec Mode				
	Red / Radio / Rec		Rec / Rec Mode				
	Red / Radio		Red / Netflix / Search				
	Red / Radio / Rec		TV/Radio /				
	Green / Subtitle		Subtitle / EQ				

