

























| Originale   | Sostituto   |
|---|---|
|    |  Power                         |
|    |  Stop / Hold                   |
|    |  Pause / Step / Freeze         |
|    |  Rec / Rec Mode                |
|    |  << / Tune-                    |
|    |  Play / Slow                   |
|    |  >> / Tune+                    |
|    |  Guide / EPG / -/--            |
|    |  Setup / OPT /                 |
|    |  Picture / Format              |
|   |  AV / Input / RDS             |
|  |  Menu / Home                 |
|  |  Exit / Cancel / Clear       |
|  |  Red / Netflix / Search      |
|  |  Green / APP / Repeat        |
|  |  Yellow / YouTube / Repeat   |
|  |  Blue / Prime Video / Random |

| Originale   | Sostituto   |
|---|---|
|    |  Info / Angle                |
|    |  Shift + Setup / OPT / Tools |
|    |  Up                          |
|    |  Left                        |
|    |  OK                          |
|    |  Right                       |
|    |  Back / Return               |
|    |  Down                        |
|    |  Smart / List                |
|    |  Vol+                        |
|   |  Mute / Dimmer              |
|  |  CH+ / Page+               |
|  |  Vol-                      |
|  |  CH- / Page-               |
|  |  1                         |
|  |  2                         |
|  |  3                         |



