



Originale	Sostituto
Power	Power
Mute	Mute
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	Guide
Back	Back
P.Mode	Shift + Format
S.Mode	Dual
Sleep	Sleep

Originale	Sostituto
NICAM	Smart
Menu	Menu
Source	AV
Up	Up
Down	Down
Right	Right
Left	Left
OK	Ok
Exit	Exit
Display	Info
Vol +	Vol +
Vol -	Vol -
List	List
Fav List	Pre Ch
CH +	Ch +
CH -	Ch -
TV / Radio	TV/R



