



Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Sleep	 Sleep
 Mute	 Mute	 Display	 Info
 1	 1	 CH+	 Ch +
 2	 2	 CH-	 Ch -
 3	 3	 Up	 Up
 4	 4	 Left	 Left
 5	 5	 OK	 Ok
 6	 6	 Right	 Right
 7	 7	 Down	 Down
 8	 8	 Aspect	 Format
 9	 9	 Source	 AV
 0	 0	 P.Mode	 Shift + Format
 -/--	 GUIDE	 S.Mode	 Shift + Dual
 Recall	 BACK	 Exit	 Exit
 Vol+	 + VOL	 Menu	 Menu
 Vol-	 VOL -	 Media	 Media
 Nicam	 DUAL	 Play / Pause	 Play





Originale	Sostituto
Play / Pause	Pause
I<<	I<<
>>I	>>I
Rec	Rec
Stop / Hold	Stop
<< / Index	<<
>> / Size	>>
Text	Text
FAV	Pre Ch
FAV-	Shift + Down
FAV+	Shift + Up
Reveal	Smart
Cancel	Shift + Exit
Subpage	Shift + Subt
Subtitle	Subt
Red / TV/Radio	Red
Green	Green

Originale	Sostituto
Yellow	Yellow
Blue	Blue

