
 
 

 
 
 

 
 
 
 





 




 
 
 




 


 


 
 
 
 
 
 

 
 
 

 

 

 
 
 
 

 




 








Originale	Sostituto
 Power	 Power
 VCR	 Smart
 DVD	 Media
 Open / Close	 Eject
 Title / PBC	 Text
 Menu	 Menu
 Display	 Info
 Input	 AV
 Up / PR +	 Up
 Up / PR +	 Ch +
 Down / PR -	 Down
 Right	 Right
 Left	 Left
 Enter / OK	 Ok
 Down / PR -	 Ch -
 Setup	 D. Menu
 Clear / 3D	 Red

Originale	Sostituto
 Repeat	 Shift + Text
 A-B	 Shift + Red
 Subtitle	 Subt
 Audio	 Dual
 I<< Prev	 I<<
 Play / Pause	 Play
 Play / Pause	 Pause
 Next >>I	 >>I
 <<	 <<
 >>	 >>
 Stop	 Stop
 Program	 Sleep
 CLK / CNT	 List
 Search	 Shift + TV/R
 Zoom	 Shift + Eject
 Rec	 Rec
 TV / VCR	 TV/R



