












 



























 

 



 




























 


Originale	Sostituto	Originale	Sostituto
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	AV/Source		AV / Input / RDS
	0		0
	Exit		Exit / Cancel / Clear
	-/--		Shift + Guide / EPG / -/--
	CH+		CH+ / Page+
	[i]/Info		Info / Angle

Originale	Sostituto	Originale	Sostituto
	Vol+		Vol+
	CH-		CH- / Page-
	I-II		Audio / Lang I/II
	Vol-		Vol-
	Up		Up
	Left		Left
	OK/Select		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	TV/DTV		TV/Radio /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[≡]/Text		Text / Goto
	[≡o]		Sleep / Timer





Originale	Sostituto
 [=+]/[X]	 << / Tune-
 [=x]/[∞]	 >> / Tune+
 [.] / [*]	 I<< / Preset-
 [=◇]/[+]/Wide	 Picture / Format
 [=?]	 >>I / Preset+
 [=i]/Guide	 Guide / EPG / -/--
 P<P/SWAP	 Fav / Marker / PC
 PP	 Back / Return

Originale	Sostituto

