


 




 
 


 




 







 









 





 





 



 

 

 














 
 
 
 


 




Originale	Sostituto	Originale	Sostituto
 Power	 Power	 PR +	 Up
 Mute	 Mute	 PR -	 Ch -
 1	 1	 PR -	 Down
 2	 2	 Vol +	 Vol +
 3	 3	 Vol +	 Right
 4	 4	 Vol -	 Vol -
 5	 5	 Vol -	 Left
 6	 6	 OK	 Ok
 7	 7	 SWAP	 Back
 8	 8	 16:9	 Format
 9	 9	 White / i	 Info
 0	 0	 Red	 Red
 --	 GUIDE	 Green	 Green
 AV / TV	 TV/R	 Yellow	 Yellow
 Menu	 Menu	 Blue	 Blue
 TXT	 Text	 Stop	 Stop
 PR +	 Ch +	 Reveal	 Smart

Originale	Sostituto	Originale	Sostituto
 PR +	 Up	 TV	 AUX
 PR -	 Ch -	 DVD	 SAT
 PR -	 Down	 SLEEP	 REC MODE
 Vol +	 Vol +	 DUAL	 SUBT
 Vol +	 Right	 AD	 SETTINGS
 Vol -	 Vol -	 PICTURE	 ECO
 Vol -	 Left	 FORMAT	 3D
 OK	 Ok	 E-MANUAL	 TIMER
 SWAP	 Back	 REPEAT	 ZOOM
 16:9	 Format	 D.MENU	 TEXT
 White / i	 Info	 TOP MENU	 DISPLAY INFO
 Red	 Red	 MENU	 OK
 Green	 Green	 CLEAR	 RETURN BACK
 Yellow	 Yellow	 EXIT	 HOME
 Blue	 Blue	 SMART	 CH +
 Stop	 Stop	 APP	 CH -
 Reveal	 Smart	 MEDIA	 VOL +





Originale	Sostituto	Originale	Sostituto
 Double	 Media		
 SUB	 Subt		
 MIX	 +  Shift + Text		
 Update	 Eject		

