

 

 
 
 
 
 
 
 

 
 

 

 
 
 


 

 
 
 

 
 

 
 

 
 

 

 

 





 

 

Originale	Sostituto
 On	 Shift + Power
 Standby	 Power
 Sleep	 Sleep
 Dimmer	 Smart
 Status	 Options
 Search	 TV/R
 BD	 1
 Tuner	 2
 Band	 3
 DVD	 4
 Dock	 5
 Shift	 6
 TV	 7
 Game	 8
 SAT/CBL	 9
 V.AUX	 0
 Memory	 Subt

Originale	Sostituto
 Mode	 Format
 CH+	 Ch +
 CH-	 Ch -
 Tuning Up	 Shift + Ch +
 Tuning Down	 Shift + Ch -
 Quick Select 1	 Shift + 1
 Quick Select 2	 Shift + 2
 Quick Select 3	 Shift + 3
 Quick Select 4	 Shift + 4
 Menu	 Menu
 Audio Adjust	 Dual
 Vol+	 Vol +
 Vol-	 Vol -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left





Originale	Sostituto
 Enter	 Ok
 CH Level	 Media
 Return	 Back
 Night	 3D
 Restorer	 Exit
 Tone	 List
 Mute	 Mute
 Surround Left	 Shift + Left
 Surround Right	 Shift + Right
 Audio Delay -	 Shift + Vol -
 Audio Delay +	 Shift + Vol +
 I<< Ipod	 I<<
 Stop Ipod	 Stop
 Play/Pause Ipod	 Play
 >>I Ipod	 >>I
 << Ipod	 <<
 >> Ipod	 >>

Originale	Sostituto
 Repeat Ipod	 Text
 Random Ipod	 Info

