



Originale	Sostituto
Power	Power
Tv/AV	AV
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	Shift + Guide
Eject	Eject
Play/Pause	Play
Stop	Stop
Return	Back

Originale	Sostituto
Mute	Mute
Vol+	Vol +
Vol-	Vol -
Up	Up
CH+	Ch +
CH-	Ch -
Down	Down
Right	Right
Left	Left
Sys Menu	Menu
Display	Shift + Info
OK	Ok
Picture	Format
Sound	Dual
Timer	Shift + AV
Nicam/A2	Media
Lan/Prog-	Shift + Ch -



