



Originale	Sostituto
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Info	Info / Angle
0	0
Recall	Back / Return
PMode	Picture / Format
I / II	Audio / Lang I/II
EPG	Guide / EPG / -/--

Originale	Sostituto
Sleep	Sleep / Timer
Input	AV / Input / RDS
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Menu	Menu / Home
Exit	Exit / Cancel / Clear
FAV	Fav / Marker / PC
Vol +	Vol+
ADD / DEL	Shift + Back / Return
PR +	CH+ / Page+
Vol -	Vol-
Cancel	Shift + Exit / Cancel / Clear
PR -	CH- / Page-
Red	Red / Netflix / Search





Originale	Sostituto
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Play / Pause	Play / Slow
Play / Pause	+ Shift + Play /
Stop	Stop / Hold
Setup	Setup / OPT /
Eject	Eject / Surround
I<< / Text	+ Shift + I<< / Preset-
I<< / Text	I<< / Preset-
<<	<< / Tune-
Size	Zoom / Size
S. Title M.	Sound / Title
>>I / Hold	>>I / Preset+
>>I / Hold	+ Shift + >>I / Preset+
>> / Reveal	>> / Tune+
Subpage / Rec	+ Shift + Rec / Rec Mode

Originale	Sostituto
Subpage / Rec	Rec / Rec Mode
Index / List	Smart / List

