








 







 
 




 
 






Originale	Sostituto
 Standby	 Power
 OSD	 Display / Media
 Mute	 Mute / Dimmer
 Open/Close	 Eject / Surround
 Video	 Shift + 4
 1	 1
 2	 2
 3	 3
 Return	 Back / Return
 4	 4
 5	 5
 6	 6
 Default	 Smart / List
 7	 7
 8	 8
 9	 9
 Clear	 Exit / Cancel / Clear

Originale	Sostituto
 Goto	 Text / Goto
 0	 0
 10+	 Guide / EPG / -/--
 Prog	 TV/Radio /
 Mark	 Fav / Marker / PC
 Menu/PBC	 Menu / Home
 Title	 Sound / Title
 N/P	 Red / Netflix / Search
 Up	 Up
 Setup	 Setup / OPT /
 Left	 Left
 Enter	 OK
 Right	 Right
 Play	 Play / Slow
 Down	 Down
 Zoom	 Zoom / Size
 I<<	 I<< / Preset-



