

 

 


 


 
 

 


 
 


 
 

 

 

 
 

 
 
 


 
 
 
 
 
 

 

 




Originale		Sostituto		Originale		Sostituto	
	Power		Power		8		8
	Mute		Mute		9		9
	Vol+		Vol +		0		0
	Vol-		Vol -		-/--		Shift + Guide
	Prog+		Ch +		PRE		Pre Ch
	Prog-		Ch -		Up/P+		Up
	[≡]/TXT		Text		Down/P-		Down
	[+]/Display		Info		Right/Vol+		Right
	Tv/DVB-T		Smart		Left/Vol-		Left
	[]/Line		Media		[II]/Tv Menu		Menu
	1		1		-IXI-/Exit		Exit
	2		2		Timer/Sleep		Shift + Power
	3		3		-I/I-/P.STD		Shift + Format
	4		4		-I/I-/S.STD		Shift + Dual
	5		5		[<>]/P.Size		Format
	6		6		Open/Close		Eject
	7		7		Rec		Rec





Originale		Sostituto		Originale		Sostituto	
	Stop		Stop		[/≡]/Audio		Dual
	Play		Play		[≡◆]/Subtitle		Subt
	Pause		Pause		[≡?]/Goto		Options
	<</< Slow		<<		[≡+]/Program/Me		TV/R
	Slow >/>>		>>		[<≡]/List/Angle		Shift + Ch -
	<</< Step		<<		[≡>]/Bookmark/O		Shift + Ch +
	Step >/>>		>>		[≡o]/Zoom/EPG		Guide
	Red/Setup		Red		[≡X]/Cancel/i		3D
	Green/Input		Green		MS		Back
	Yellow/Title		Yellow		[▼]/Still		AV
	Blue/Menu		Blue		OK		Ok
	PIP On/Off		Shift + 3D				
	PIP Source		Shift + AV				
	PIP Sound		Shift + TV/R				
	PIP Swap		Shift + Subt				
	Timer/repeat		Shift + Text				
	[≡i]/A-B		Shift + Info				

