 



























Originale		Sostituto		Originale		Sostituto	
	POWER		Power		9 wxyz		9
	←○		Shift + Smart / List		TV		TV/Radio /
	**/Ö		Shift + Display / Media		0		0
	*²/♀		Shift + Red / Netflix /		↔		Shift + Back / Return
	SOURCE		AV / Input / RDS		TV GUIDE		Guide / EPG / -/-
	PRESETS		Smart / List		[≡]		Text / Goto
	≡≡≡		Setup / OPT /		MENU		Menu / Home
	♪/☺/▶		Display / Media		Q.MENU		D.Menu / Top
	SLEEP		Sleep / Timer		UP		Up
	1 . / @		1		LEFT		Left
	2 abc		2		OK		OK
	3 def		3		RIGHT		Right
	4 ghi		4		DOWN		Down
	5 jkl		5		BACK		Back / Return
	6 mno		6		→◻←		Picture / Format
	7 pqrs		7		EXIT		Exit / Cancel / Clear
	8 tuv		8		*FAV		Fav / Marker / PC





Originale		Sostituto	
	VOL+		Vol+
	MUTE		Mute / Dimmer
	P+		CH+ / Page+
	VOL-		Vol-
	INFO		Info / Angle
	P-		CH- / Page-
	REC		Rec / Rec Mode
	PLAY		Play / Slow
	PAUSE		Pause / Step / Freeze
	STOP		Stop / Hold
	LANG.		Audio / Lang I/II
	<<		<< / Tune-
	>>		>> / Tune+
	[≡]...		Sound / Title
	RED		Red / Netflix / Search
	GREEN		Green / APP / Repeat
	YELLOW		Yellow / YouTube / Repeat

Originale		Sostituto	
	BLUE		Blue / Prime Video / Random

