


 





 




 


 
 





 
 


 


 
 
 








Originale	Sostituto
 Power	 Power
 Menu	 Menu
 Q.Menu	 D. Menu
 Exit	 Exit
 Back	 Back
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Mute	 Mute
 Vol+	 Vol +
 Vol-	 Vol -

Originale	Sostituto
 PR +	 Ch +
 PR-	 Ch -
 i	 Info
 Guide/Tv+Book	 Shift + Options
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Pre Ch
 TV	 TV/R
 [≡]/Text	 Text





Originale		Sostituto		Originale		Sostituto	
	*/o..		Eject				
	Source/Game		AV				
	*/o		List				
	World		Guide				
	Music/Movie/Phot		Options				
	[-O-]		Sleep				
	[≡]..		Subt				
	Lang		Dual				
	Rec		Rec				
	Stop		Stop				
	Pause		Pause				
	Play		Play				
	>>		>>				
	<<		<<				

