
 

 








 
 


 













 






Originale	Sostituto
 Power	 Power
 UHF	 Smart
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/Zoom	 0
 II	 II Pause
 Recall	 Back
 Menu	 Menu
 i	 Info

Originale	Sostituto
 EPG	 Guide
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Tv/Radio	 TV/R
 Search	 Shift + TV/R
 >>I	 >>I
 I<<	 I<<
 FAV	 Pre Ch
 SAT	 Media
 P/N	 Options
 Tv/SAT	 AV
 F1	 List
 F2	 Sleep





Originale		Sostituto		Originale		Sostituto	
	Help		3D				
	White/[...]		Subt				
	Red/AudioR/L		Red				
	Green/[+]		Green				
	Yellow/Timer		Yellow				
	Blue/[≡]		Blue				

