 



 



























 





Originale	Sostituto
	 Power
	 Exit / Cancel / Clear
	 Zoom / Size
	 Stop / Hold
	 Play / Slow
	 Smart / List
	 Info / Angle
	 Sleep / Timer
	 Setup / OPT /
	 Sound / Title
	 TV/Radio /
	 Picture / Format
	 Menu / Home
	 Up
	 Text / Goto
	 OK
	 Left

Originale	Sostituto
	 Right
	 Vol+
	 Down
	 CH+ / Page+
	 Vol-
	 Mute / Dimmer
	 CH- / Page-
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 1
	 2
	 3
	 4
	 5
	 6



 

 

 

 

 

 





 



Originale		Sostituto		Originale		Sostituto	
7	7	AUX - HDD 7	7				
8	8	USB 8	8				
9	9	BLUETOOTH 9	9				
[Source]	Source	RDS AV INPUT	AV / Input / RDS				
0	0	HDMI - BAT 0	0				
I-II	I-II	LANG I/II AUDIO	Audio / Lang I/II				





Originale	Sostituto
 Power	 Power
 Prog	 TV/Radio /
 >>	 >> / Tune+
 Menu	 Menu / Home
 Up	 Up
 OK	 OK
 Left	 Left
 Right	 Right
 Down	 Down
 P+	 CH+ / Page+
 P-	 CH- / Page-
 Rec	 Rec / Rec Mode
 <<	 << / Tune-
 Stop	 Stop / Hold
 Play	 Play / Slow
 1	 1
 2	 2

Originale	Sostituto
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Source	 AV / Input / RDS
 0	 0

