


 
 








 

 
 



 


 
 

 
 
 
 
 


 
 
 

 

 
 

 
 

 
 
 
 
 
 

 
 

 



 
 
 










Originale		Sostituto		Originale		Sostituto	
	Power		Power		Up		Up
	1		1		Down		Down
	2		2		Right		Right
	3		3		Left		Left
	4		4		Vol+		Vol +
	5		5		Vol-		Vol -
	6		6		P+		Ch +
	7		7		P-		Ch -
	8		8		Mute		Mute
	9		9		i		Info
	0		0		Exit		Exit
	↔		Pre Ch		Source		AV
	Back		Back		Q.Menu		D. Menu
	Menu		Menu		EPG		Guide
	Netflix		Media		TXT		Text
	Internet		Smart		*		Format
	Ok		Ok		*/Q		3D





Originale	Sostituto
[>]	Options
Lang	Dual
Subt.	Subt
[+]	Shift + Format
TV	TV/R
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
Rec	Rec
Play	Play
Stop	Stop
Pause	Pause
<<	<<
>>	>>

Originale	Sostituto

