

 



 

 


 


 


 
 

 



 


 




 









 










| Originale | Sostituto | Originale | Sostituto |
|---|---------------------------|---|---------------------------|
|  TV/R | TV/Radio / |  PROGRAM TV/RADIO | TV/Radio / |
|  POWER | Power |  POWER | Power |
|  MUTE | Mute / Dimmer |  DIMMER MUTE | Mute / Dimmer |
|  SLEEP | Sleep / Timer |  TIMER SLEEP | Sleep / Timer |
|  1 | 1 |  TV 1 | 1 |
|  2 | 2 |  DVD 2 | 2 |
|  3 | 3 |  CD - STB 3 | 3 |
|  SUB | Subtitle / EQ |  EQ SUBTITLE | Subtitle / EQ |
|  4 | 4 |  VIDEO 4 | 4 |
|  5 | 5 |  TAPE 5 | 5 |
|  6 | 6 |  TUNER 6 | 6 |
|  EPG 2 | Shift + Guide / EPG / -/- |  SHIFT + GUIDE EPG | Shift + Guide / EPG / -/- |
|  EPG 1 | Guide / EPG / -/- |  GUIDE EPG | Guide / EPG / -/- |
|  7 | 7 |  AUX - HDD 7 | 7 |
|  8 | 8 |  USB 8 | 8 |
|  9 | 9 |  BLUETOOTH 9 | 9 |
|  TXT | Text / Goto |  GOTO TEXT | Text / Goto |

| Originale | Sostituto | Originale | Sostituto |
|---|-----------------------------|--|-----------------------------|
|  RECALL | Back / Return |  RETURN BACK | Back / Return |
|  0 | 0 |  HDMI - BAT 0 | 0 |
|  FAV 2 | Shift + Fav / Marker / PC |  SHIFT + FAV MARKER | Shift + Fav / Marker / PC |
|  FAV 1 | Fav / Marker / PC |  PC FAV MARKER | Fav / Marker / PC |
|  MENU | Menu / Home |  HOME MENU | Menu / Home |
|  EXIT | Exit / Cancel / Clear |  CLEAR EXIT CANCEL | Exit / Cancel / Clear |
|  Up / CH + | Up |  Up | Up |
|  Left / VOL - | Left |  Left | Left |
|  OK | OK |  OK | OK |
|  Right / VOL + | Right |  Right | Right |
|  Down / CH - | Down |  Down | Down |
|  Red / Audio | Red / Netflix / Search |  NETFLIX SEARCH | Red / Netflix / Search |
|  Red / Audio | Audio / Lang I/II |  LANG I/II AUDIO | Audio / Lang I/II |
|  Blue / Info | Info / Angle |  ANGLE INFO | Info / Angle |
|  Blue / Info | Blue / Prime Video / Random |  Prime Video RANDOM | Blue / Prime Video / Random |
|  GREEN/PAUSE | Green / APP / Repeat |  APP REPEAT | Green / APP / Repeat |
|  Yellow / Zoom | Zoom / Size |  SIZE ZOOM | Zoom / Size |





| Originale | Sostituto |
|---|---|
|  Yellow / Zoom |  Yellow / YouTube / Repeat |
|  VOL+ |  Vol+ |
|  Page+ |  CH+ / Page+ |
|  VOL- |  Vol- |
|  Page- |  CH- / Page- |
|  << |  << / Tune- |
|  >> |  >> / Tune+ |
|  PLAY |  Play / Slow |
|  STOP |  Stop / Hold |
|  I<< |  I<< / Preset- |
|  >>I |  >>I / Preset+ |
|  PAUSE |  Pause / Step / Freeze |
|  REC |  Rec / Rec Mode |
| | |
| | |
| | |
| | |
| | |
| | |

| Originale | Sostituto |
|-----------|-----------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

