 







 

 



 

 



 

 







 

 

 
 
 








 







| Originale  | Sostituto   | Originale  | Sostituto  |
|--|---|--|--|
|  Power      |  Power               |  Vol-     |  Vol-                   |
|  Mute       |  Mute / Dimmer       |  Vol+     |  Vol+                   |
|  1          |  1                   |  →←       |  Guide / EPG / -/--     |
|  2          |  2                   |  Channel- |  Down                   |
|  3          |  3                   |  Bass+    |  Right                  |
|  4          |  4                   |  Treble+  |  >> / Tune+             |
|  5          |  5                   |  Start    |  Menu / Home            |
|  6          |  6                   |  Bass-    |  Left                   |
|  7          |  7                   |  Treble-  |  << / Tune-             |
|  8         |  8                  |  End     |  Exit / Cancel / Clear |
|  9        |  9                 |  |  |
|  Mem+     |  CH+ / Page+       |  |  |
|  0        |  0                 |  |  |
|  C        |  Fav / Marker / PC |  |  |
|  Mem-     |  CH- / Page-       |  |  |
|  Channel+ |  Up                |  |  |
|  People   |  Smart / List      |  |  |

| Originale  | Sostituto   | Originale  | Sostituto  |
|--|---|--|--|
|  Power      |  Power               |  Vol-     |  Vol-                   |
|  Mute       |  Mute / Dimmer       |  Vol+     |  Vol+                   |
|  1          |  1                   |  →←       |  Guide / EPG / -/--     |
|  2          |  2                   |  Channel- |  Down                   |
|  3          |  3                   |  Bass+    |  Right                  |
|  4          |  4                   |  Treble+  |  >> / Tune+             |
|  5          |  5                   |  Start    |  Menu / Home            |
|  6          |  6                   |  Bass-    |  Left                   |
|  7          |  7                   |  Treble-  |  << / Tune-             |
|  8         |  8                  |  End     |  Exit / Cancel / Clear |
|  9        |  9                 |  |  |
|  Mem+     |  CH+ / Page+       |  |  |
|  0        |  0                 |  |  |
|  C        |  Fav / Marker / PC |  |  |
|  Mem-     |  CH- / Page-       |  |  |
|  Channel+ |  Up                |  |  |
|  People   |  Smart / List      |  |  |

