 



 

 

 

 

 

 

 

 

 

 

 

 
 
 

 







Originale	Sostituto
 Mute	 Mute / Dimmer
 Power	 Power
 PP	 Back / Return
 I / II	 Audio / Lang I/II
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 --	 Fav / Marker / PC
 P<P	 Display / Media
 Menu	 Menu / Home

Originale	Sostituto
 Info	 Info / Angle
 Left	 Left
 P +	 Shift + CH+ /
 P +	 CH+ / Page+
 Right	 Right
 P -	 Shift + CH- /
 P -	 CH- / Page-
 Vol -	 Vol-
 Vol +	 Vol+
 Red / Sound	 Red / Netflix / Search
 Green / Picture	 Green / APP / Repeat
 Yellow / Feature	 Yellow / YouTube / Repeat
 Blue / Install	 Blue / Prime Video / Random
 TV	 TV/Radio /
 AV	 AV / Input / RDS
 Text	 Text / Goto
 Mix	 Shift + Text / Goto





Originale	Sostituto
Timer	TIMER SLEEP Sleep / Timer
Size	SIZE ZOOM Zoom / Size
Cancel	CLEAR EXIT CANCEL Exit / Cancel / Clear
Hold	HOLD Stop / Hold
Help	SHIFT + ANGLE INFO Shift + Info / Angle
Index	OK OK

Originale	Sostituto

