







 






Originale	Sostituto
 Standby	 Power
 Subtitle	 Subtitle / EQ
 Language	 Audio / Lang I/II
 Open/Close	 Eject / Surround
 Angle	 Info / Angle
 Title	 Sound / Title
 Vol+	 Vol+
 Prog	 TV/Radio /
 Menu	 Menu / Home
 Vol-	 Vol-
 Setup	 Setup / OPT /
 Up	 Up
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Left	 Left
 Enter	 OK
 Right	 Right

Originale	Sostituto
 L/R	 Smart / List
 Down	 Down
 Stop	 Stop / Hold
 1	 1
 2	 2
 3	 3
 Goto	 Text / Goto
 4	 4
 5	 5
 6	 6
 10+	 Guide / EPG / -/-
 7	 7
 8	 8
 9	 9
 0	 0
 <<	 << / Tune-
 >>	 >> / Tune+





Originale	Sostituto
PREV I<<	PRESET- I<< / Preset-
NEXT >>I	PRESET+ >>I / Preset+
PBC	BACK Back / Return
DISPLAY	MEDIA DISPLAY Display / Media
ZOOM	SIZE ZOOM Zoom / Size
SLOW	SHIFT + SLOW Shift + Play /
MUTE	DIMMER MUTE Mute / Dimmer
A-B	YouTube REPEAT A-B Yellow / YouTube / Repeat
REPEAT	APP REPEAT Green / APP / Repeat
VIDEO/ MODE	RDS AV INPUT AV / Input / RDS

Originale	Sostituto

