



 

 
 
 







 



 

 





















 

 

 















 







Originale		Sostituto		Originale		Sostituto	
	Power		Power		Up		Up
	1		1		Down		Down
	2		2		Left		Left
	3		3		Right		Right
	4		4		OK		OK
	5		5		Mute		Mute / Dimmer
	6		6		Red		Red / Netflix / Search
	7		7		Green		Green / APP / Repeat
	8		8		Yellow		Yellow / YouTube / Repeat
	9		9		Blue		Blue / Prime Video / Random
	0		0		<<		<< / Tune-
	Back		Back / Return		Play		Play / Slow
	Menu		Menu / Home		Pause		Pause / Step / Freeze
	CH+		CH+ / Page+		>>		>> / Tune+
	CH-		CH- / Page-		I<<		I<< / Preset-
	Vol+		Vol+		>>I		>>I / Preset+
	Vol-		Vol-		Stop		Stop / Hold





	Originale	Sostituto	Originale	Sostituto
	Rec	Rec / Rec Mode		
	Mode	Display / Media		
	TV	TV/Radio /		
	Home	+ Shift + Menu /		
	Guide	Guide / EPG / -/--		

