
 

 
 
 

 





 











 
 

 












Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tv/Radio	 TV/R
 ←PR	 Back
 EPG	 Guide
 Menu	 Menu
 Info	 Info

Originale	Sostituto
 Exit	 Exit
 Up/PR+	 Up
 Down/PR-	 Down
 OK/List	 Ok
 Right	 Right
 Left	 Left
 Vol+	 Vol +
 Vol-	 Vol -
 ↑	 Ch +
 ↓	 Ch -
 Pause	 Pause
 [+]	 3D
 FAV	 Pre Ch
 UHF	 Smart
 PAL/NTSC	 Format
 TV/AV	 AV
 Red	 Red





Originale	Sostituto
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Audio	 Dual
 TXT	 Text
 [...]	 Subt
 Audio L/R	 +  Shift + Dual

Originale	Sostituto

