



 






























Originale	Sostituto	Originale	Sostituto
	Power		Power
	Mute		Mute / Dimmer
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue/Timer		Blue / Prime Video / Random
	Format		Picture / Format
	Res.		D.Menu / Top
	TTX		Text / Goto
	S-T		Setup / OPT /
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold

Originale	Sostituto	Originale	Sostituto
	Rec		Rec / Rec Mode
	PVR List		Smart / List
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	EPG		Guide / EPG / -/-
	Info		Info / Angle
	CH+		CH+ / Page+
	Tv/Rad		TV/Radio /
	Vol+		Vol+
	CH-		CH- / Page-
	Audio		Audio / Lang I/II
	Vol-		Vol-





Originale		Sostituto		Originale		Sostituto	
1	1	TV 1	1				
2	2	DVD 2	2				
3	3	CD - STB 3	3				
4	4	VIDEO 4	4				
5	5	TAPE 5	5				
6	6	TUNER 6	6				
7	7	AUX - HDD 7	7				
8	8	USB 8	8				
9	9	BLUETOOTH 9	9				
FAV	FAV	PC FAV MARKER	Fav / Marker / PC				
0	0	HDMI - SAT 0	0				
	Back	RETURN BACK	Back / Return				

